

# Tequila JUKEBOX

# SELF-DJ

EASY and FUN

[www.tequilajukebox.com](http://www.tequilajukebox.com)

SELF-DJ is easy and fun. Imagine a super jukebox with thousands of songs. Sort by song or artist. Find the song you want in the list. Touch YES to play.

**Tequila SELF-DJ**

sort by **song** | sort by **artist**

Flashback	Imagination
Flashdance	Irene Cara
Flavor Of The Week	American Hi-Fi
Flight 601 (All I've Got Is Time)	Fenix TX
Flint Town	Dayton Family
Flirtin' With Disaster	Molly Hatchet
Flood	Tool
Flor D'Luma (Moonflower)	Santana
Flower	Moby
Flowers on the Wall	Eric Heatherly

**2005 TEQUILA TOWN DANCE**  
**LIME THROW at 10PM**  
for bookings [www.tequilajukebox.com](http://www.tequilajukebox.com)

6224 sound files loaded

If you'd rather party than DJ, don't worry. Leave the kiosk alone and songs play at random. Add new selections anytime.

**Tequila SELF-DJ**

**PLAY**

"Flowers on the Wall"  
by  
Eric Heatherly?

YES  
NO  
info

6224 sound files loaded

Touch YES to play the song, NO to cancel, or info to see what's coming up.

## START-UP

- KIOSK ON**  
Push ON/OFF button on bottom rear of kiosk. The kiosk will light up and the SELF-DJ screen will appear in a couple of minutes.



- AMPS ON**  
BE SURE VOLUME CONTROLS ARE COMPLETELY OFF before turning on amplifiers. SLOWLY turn volumes up.



## SHUT-DOWN

- AMPS OFF**  
Switch off each amplifier. Green lights will go out in a few seconds.
- KIOSK OFF**  
Push ON/OFF button. If not shut down in a couple of minutes, hold button.
- UNPLUG CORDS**  
Unplug power cords. Unplug speaker cords. Make sure everything is off.



# SELF-DJ

EASY and FUN

[www.tequilajukebox.com](http://www.tequilajukebox.com)

Control volume, reject songs, pause to make announcements, and operate lights and effects.



Access to advanced Tequila SELF-DJ features is controlled by password.



## ADVANCED FEATURES

- VOLUME**  
SLOWLY slide up and down to increase or decrease volume.
- REJECT**  
Touch to reject. Takes a few seconds.
- PAUSE**  
Touch to pause current song. Touch again to resume.
- LIGHTS (optional)**  
Control up to 4 devices by touch. Turn effects on or off. Brighten or dim lights.

## ENTER SELF-DJ MODE

- Touch Tequila SELF-DJ button at top of screen.
- Enter password in 5 seconds to make advanced controls visible.

## EXIT SELF-DJ MODE

- Touch Tequila SELF-DJ button at top of screen.
- Leave password blank and let time expire to hide controls.

## IMPORTANT

- NEVER hold microphone in front of speakers or you may damage sound system and your hearing.
- Speak or sing directly into microphone 1" to 2" from mouth.
- Turn off switch on microphone when not in use.
- Avoid giving out the SELF-DJ password.
- Keep an eye on who is using the kiosk or be prepared for the selection of music.

[www.tequilajukebox.com](http://www.tequilajukebox.com)  
[dj@tequilajukebox.com](mailto:dj@tequilajukebox.com)

(715) 582-0728  
for bookings

Copyright© 1998-2005 Pristel Computing  
All Rights Reserved.